

DYNABREEZE

INDUSTRIAL QUALITY SINCE 1995

**300MM HEAVY DUTY
PORTABLE FAN**



MODEL FA-23600

Instruction User Manual & Warranty

CAUTION: Read the Assembly & Safety Instructions before operating and retain for future reference



Thank you & Congratulations on the purchase of your Dynabreeze 300mm Heavy Duty Portable Fan

To find out more information on this product,
please visit www.dynabreeze.com.au or contact:

Tradeware

Address 46 Birralee Rd, Regency Park SA 5010
Phone AU 1300 658 494 NZ 0800 689 960
Email info@tradeware.com.au
Website www.tradeware.com.au

SPECIFICATIONS

Motor Power	18W
Mains Adaptor Input	100-240V~, 50/60Hz, 1A
Mains Adaptor Output	26.5V 1.2A
Battery	Lithium-ion Polymer 21.6V--- 2500mAh
Battery Life Time	4hrs (high speed) --- max. 23hrs (low speed)
USB Output	5V, 1A max.

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

OPERATION CONDITIONS & SAFETY PRECAUTIONS

WARNING: When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury to persons or property.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings.

Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging. Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Safety (charging)

- **WARNING!** Mains adaptor/battery charger: Only use the original, dedicated mains adaptor/battery charger supplied with this appliance to charge the fan; do not charge the appliance with a different adaptor. Using the wrong adaptor can cause fire or explosion of the battery. Do not use the supplied charger for charging a different appliance.
- **Voltage:** Before connecting the battery charger to the fan and the power supply, ensure that the electrical voltage and circuit frequency correspond to those indicated on the charger rating label.
- **No extension cord:** Do not use the mains adaptor/battery charger with an extension cord; connect it directly to a power socket. Charging through an extension cord may cause voltage drops, unstable power supply, or overheating, which could affect the charging performance or potentially damage the battery or adapter.
- **No speed control device:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- **Connection/disconnection:** To connect the battery charger, insert the plug firmly into an appropriate socket. To disconnect, grip the power plug firmly and remove it from the outlet, do not pull on the cord. Do not leave the adaptor plugged into the power outlet while not in use. Do not use or charge the product if you notice anything wrong with the battery.

OPERATION CONDITIONS & SAFETY PRECAUTIONS

WARNING! Do not leave the appliance unattended while it is charging or running. Always unplug the battery charger from the mains power supply when you have finished charging the fan.

Do not leave the fan on the battery charger for more than 24 hours.

- **Outdoor use:** The fan has an IPX4 ingress protection rating, which means it can be used outdoors as it is protected against water sprays from all directions. However, never charge the appliance outdoors as the mains adaptor/battery charger has no outdoor protection rating and can only be used indoors.
- **Protect from moisture and shocks:** To protect against electric shock, do not immerse the battery charger or its cord or plug in water. Ensure your hands are dry before use. Do not expose the battery to liquid or subject it to strong mechanical shocks.
- **Protect the power cord:** Do not kink or damage the battery charger's power supply cord. If the charger or its cord are damaged, contact our after sales support line for advice. The cord must be replaced by the manufacturer or its a hazard.
- **Cleaning and servicing:** Before cleaning, servicing or moving the fan, Make sure the battery charger is disconnected from the appliance and from the power socket.
- **Storage:** Please remember to turn off the fan and fully recharge the fan before long-term storage. Prolonged storage of an empty battery may damage the battery.

RECHARGEABLE BATTERY HAZARDS

- **WARNING!** This product contains rechargeable batteries. Do not throw the appliance into a fire and do not subject it to high temperatures.
- **Batteries:** Battery pack has a built-in lithium battery that is non-replaceable. Please do not open the battery pack and change internal battery.
- **Disposal:** Dispose of the battery pack responsibly after the service life of the product. Do not dispose of in the bin.
- **Battery leaks:** In the occasion that the battery leaks and fluid comes into contact with skin or eyes, immediately rinse the affected area with water and contact your doctor.

USAGE CONDITIONS AND RESTRICTIONS

- **Domestic use only:** Do not use it for anything other than its intended purpose, and only use it as described in this manual, other non-recommended use may cause fire, electric shock or injury.
- **No clothes drying:** Do not use this fan as a dryer.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Location:** Place the fan on a flat, level, steady and stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Only operate the fan fully assembled with all parts. Do not use the appliance without the protective grilles (rear and front guards) in place, as serious personal injury may result. Do not attempt to force the grille in order to stop or start the fan.
- **WARNING!** DO NOT use the fan in the following areas:
 - Near an open flame, a hot burner, oven or other source of high heat.
 - On a soft surface or where it may tip over during use.
 - In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION!** Personal safety: Avoid contact with moving parts. Never insert any objects through the grilles when the fan is running, as this may cause electric shock and/or a fire hazard. Keep hair and loose clothing well away from the fan when it is in use.
- **Service:** Do not attempt to open the fan. In case of malfunction, have the fan checked and repaired by qualified service personnel only. Do not disassemble or modify the appliance.
- **Airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

GETTING STARTED


Before first use

- **Inspection:** Unwind the cord of the battery charger/mains adaptor to its full length and inspect it for damage. Do not use the charger if it or its cord or plug are damaged or not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- **Instructions:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the product overview, opposite, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** Before use, you will need to insert the battery pack. To do so, remove the back cover and battery compartment and insert the battery. Place the back cover and battery compartment back to their original positions.
NOTE: The battery is packed in a separate paper box inside the packaging. Please ensure you have removed the battery pack before disposing of the empty packaging.
- **Charging:** Before first use, the in-built battery needs to be charged according to the instructions on page 8. During charging, the charge indicators on top of the battery box will show the charging status. When the battery is fully charged, all indicator lights will turn off. A full charge will take approximately 2 to 3 hours.

PRODUCT OVERVIEW

Parts list

- 1 Handle
- 2 Stand (with anti-slip feet)
- 3 Front and rear safety guards (grilles)
- 4 Fan blade
- 5 Charging port
- 6 Motor housing
- 7 Battery box with detachable battery
- 8 On/off button, Speed control & battery charge indicator
- 9 USB connection
- 10 Battery charger/mains adaptor with cord and plug

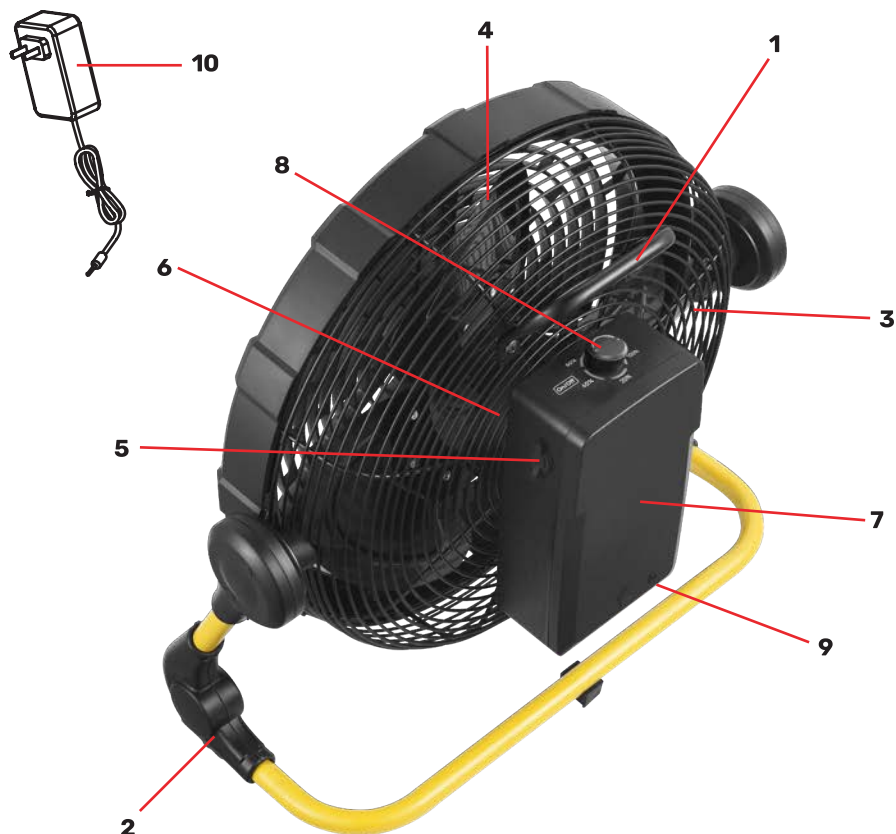

INSTRUCTIONS

Charging

- Position the fan indoors on a stable, flat surface close to a mains socket, well away from heat sources and excessive moisture.
- Make sure the fan's speed control knob is set to OFF before connecting the battery charger.
- Open the protective rubber plug to the charger socket and insert the charger jack firmly into the socket.
- Insert the battery charger plug into a suitable electrical outlet & switch on power to the outlet.
- During charging, the charge indicators on top of the battery box will show the charging status. When the battery is fully charged, all indicator lights will turn off.
- A full charge takes approximately 2 to 3 hours.
- **IMPORTANT!** Always click in the protective rubber plugs after charging.
- **NOTE:** To charge the detachable battery pack. Just connect the adaptor directly into the DC socket on the battery pack.

Operation

- When the fan is charged, you can run it cordless on battery power. Alternatively, you can run the fan on mains electricity when it is connected to the mains adaptor (battery charger) and power supply.
- Power bank can be used while attached to fan or separately by removing the power bank. battery output (output 5v, 1A max.).
- **IMPORTANT!** If you are using the fan with the mains adaptor (battery charger), always connect the charger jack first before inserting the power plug into an appropriate electrical outlet.
- Place the fan on a level surface where it will not overturn during use.
- Turn the stepless speed control knob in clockwise direction (towards "+") to start fan operation. The further you turn in clockwise direction, the higher the fan speed. Turn the speed control knob in anticlockwise direction (towards "-") to decrease the fan speed.
- Turn the speed control knob to the OFF position to stop fan operation.



Tilt adjustment

To target the breeze at a particular angle, the fan head can be tilted up or down. Simply move the fan head gently up or down to the desired position.

CAUTION: Do not tilt the fan head further than it is intended to go.



INSTRUCTIONS


Removing the battery pack

1. Push up the back cover of the waterproof box and take off the back cover.
2. Uncover the bottom USB waterproof silicone cover.
3. Hold both side of the bottom of the battery (beveled side) and pull out the battery pack.



Inserting the battery pack

1. Push and slide the battery into the battery slot. Please ensure you have the battery facing correct direction.
2. Place the rear cover over the compartment so that the cover is slightly misaligned upwards (approx 5mm), and then push down to fasten.
3. Close the bottom USB waterproof silicone cover.

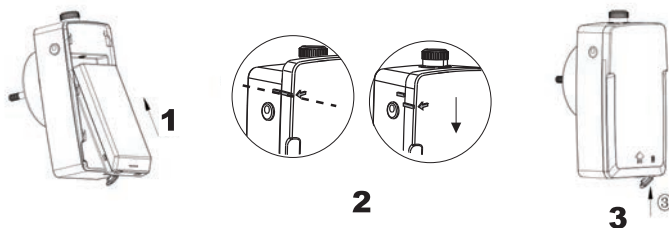

Using power bank

This outdoor fan is equipped with a detachable rechargeable battery pack so that you can use the fan outdoors without the need for a power connection or as a separate power bank to charge your devices. The battery box at the back of the fan has a socket for the charger jack and a USB port for easy charging of your mobile devices. Both ports are covered with a protective rubber plug which you must replace after charging to ensure the fan's water resistance and suitability for outdoor use.



CARE & MAINTENANCE

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear guards to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. If wiping the battery box with a damp cloth, make sure rubber plugs for the charging socket and USB port are securely in place.
- **Storage:** Please remember to turn off the fan and fully recharge the fan before long-term storage. Prolonged storage of an empty battery may damage the battery. When storing your fan, make sure to keep it in a safe, dry location, protected from dust. We recommend using the original packaging for storage. Alternatively, cover the cleaned appliance with a piece of material or a plastic bag for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not take the motor part apart; do not attempt to repair or modify the fan. In case of damage or malfunction, or if the battery charger (mains adaptor) is damaged, have the unit repaired by authorised personnel only, or contact our after sales support line for advice on repair or replacement.

Overheat protection

This fan is equipped with a thermal and over-current protection device, which switches the fan off automatically in the event of abnormal overheating. If the protection device is triggered, switch off and unplug the fan. Check and remove any obvious causes for overheating (obstructions to the airflow) and have the unit checked by an authorised service agent.

WARRANTY

Under the Australian Consumer Law (ACL) or NZ Consumer Guarantees Act (CGA), you are entitled to a 12 month replacement or refund for product failure and compensation for any other reasonably foreseeable loss or damage.

Tradeware offers a 3 Year Warranty. The additional warranties, terms and conditions are outlined on the website www.dynabreeze.com.au under the Support tab.

Under Support you can also **Register your product** upon purchase and enjoy the peace of mind of knowing your product is registered should anything happen.

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling Tradeware.

To Claim, the fan should be returned to the place of purchase or via the website within the warranty period.

Such claims must include:

- **Details of the alleged defect or fault;**
- **Evidence of the claim; and**
- **Proof of purchase documentation which clearly shows the date and place of purchase.**

Please visit www.dynabreeze.com.au for more details



Tradeware

46 Birralee Road, Regency Park
South Australia 5010
info@tradeware.com.au
1300 658 494
www.tradeware.com.au

Due to continual product development, please note the information and content provided may not be final and may be subject to changes.

