DYNABREEZE

INDUSTRIAL QUALITY SINCE 1995

HEAVY DUTY WAIST FAN

FACTORY 3 YEAR WARRANTY



MODEL FA-23617

Instruction User Manual & Warranty

CAUTION: Read the Assembly & Safety Instructions before operating and retain for future reference.

Thank you & congratulations on the purchase of your Dynabreeze Heavy Duty Waist Fan

---

To find out more information on this product,please visit **www.dynabreeze.com.au** or contact:

Tradeware

Address	46 Birralee Rd, Regency Park SA 5010
Phone	AU 1300 658 494 NZ 0800 689 960
Email	info@tradeware.com.au
Website	www.dynabreeze.com.au

CAUTION: Please read through the instructions carefully before using the product and ensure that the manual is kept in a safe place for future reference. Before this product is used, it must be properly located and operated in accordance with the product use and safety instructions.

WARNING: As with all machinery, there are certain hazards involved with operation and use of this appliance. Following the safety precautions in this User Manual and exercising respect and caution when using this appliance will considerably lessen the risk of personal injury. However if these safety precautions are overlooked or ignored, personal injury or damage to property may result.

PRODUCT SPECIFICATIONS

Model	FA-23617
Name	Heavy Duty Waist Fan
Type-C Input	5V ⎓ 2A
Battery Capacity	4000mAh x 2 cells 3.7V Li-ion Battery
Product Weight	318g
Product Size	84 x 72 x 90mm
Implementation Standard	AS/NZS 60335.1; AS/NZS 60335.2.80

RECHARGEABLE BATTERY HAZARDS

WARNING! This product contains rechargeable batteries. Do not throw the appliance into a fire and do not subject it to high temperatures.
Batteries: Battery pack has a built-in lithium battery that is non-replaceable. Please do not open the battery pack and change internal battery.
Disposal: Dispose of the battery pack responsibly after the service life of the product.
Battery leaks: In the occasion that the battery leaks and fluid comes into contact with skin or eyes, immediately rinse the affected area with water and contact your doctor.

USAGE CONDITIONS & RESTRICTIONS

Domestic use only: Do not use it for anything other than its intended purpose, and only use it as described in this manual, other non-recommended use may cause fire, electric shock or injury.
No clothes drying: Do not use this fan as a dryer.
Children: This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.

PRODUCT OVERVIEW

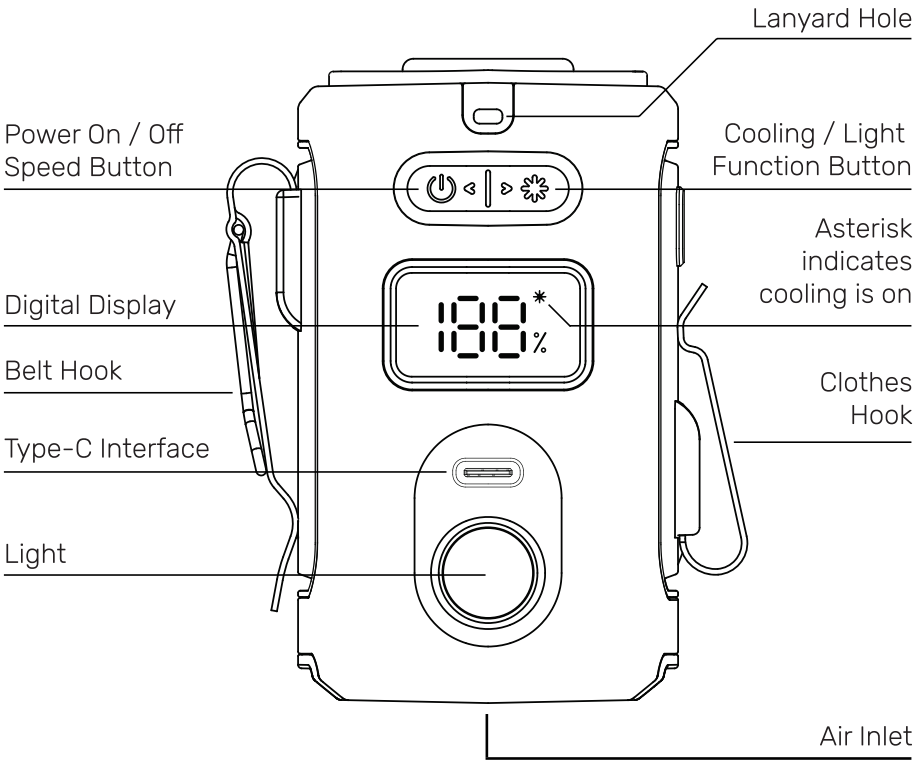

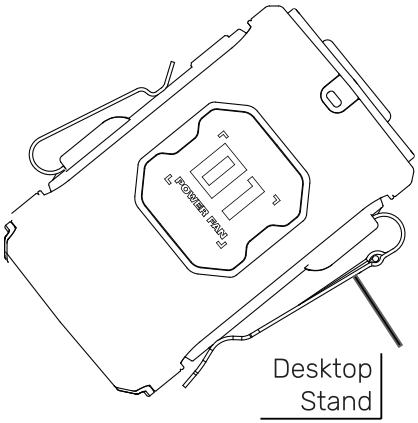

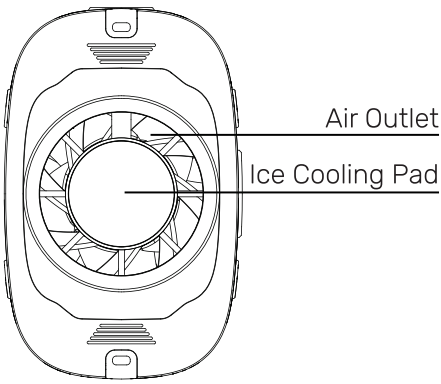

INSTRUCTIONS FOR USE



Power / Speed Button

Cooling / Light Function Button

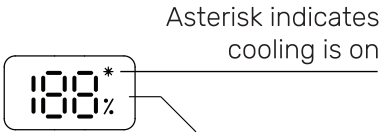

Power Button:

1. Press and hold to turn the fan on and off. There are a total of 5 speed to choose from.

Display:

1. LED screen shows battery percentage / speed when is use.
2. When the power is below 5%, the display will flash.
3. During charging, the battery level percentage is displayed. The percentage icon flashes while charging and stays on when fully charged (100%).
4. When the product is operated while charging, the display will show the current speed level, while the battery percentage icon flashes to indicate charging status. Once fully charged, the percentage icon will stay on.

Temperature Protection:

If the battery temperature is too low or too high during charging, charging will stop and E1 (low temperature) or E2 (high temperature) will flash on the display. Charging will resume automatically once the temperature returns to a safe range.

Cooling Boost Button:

Activate the thermo-electric cooling plates for a rapid cool boost.

1. Press Cooling / Light Function Button.

Light Function:

1. Press and hold the Cooling / Light Function Button for 1.5s to turn on.
2. Press and hold the Cooling / Light Function Button a second time to activate emergency flashing function.
3. Press and hold the Cooling / Light Function Button a third time to turn off.

How to wear the Waist Fan:

1. Attach the fan securely to your waistband, using the rear clip. Position the air outlet upwards under your shirt for maximum airflow circulation.
2. Ensure clothing does not block the air intake or air outlet.
3. Adjust clothing and insert shirt into clothing hook

WARRANTY

Under the Australian Consumer Law (ACL) or NZ Consumer Guarantees Act (CGA), you are entitled to a 12 month replacement or refund for product failure and compensation for any other reasonably foreseeable loss or damage. **Tradeware offers a 3 Year Warranty. The additional warranties, terms and conditions are outlined on the website www.dynabreeze.com.au under the Support tab.** Under Support, you can also register your product upon purchase and enjoy the peace of mind of knowing your product is registered should anything happen. If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling Tradeware. To claim, the fan should be returned to the place of purchase or via the website within the warranty period. Such claims must include:

- Details of the alleged defect or fault
- Evidence of the claim
- Proof of purchase documentation which clearly shows the date and place of purchase.

Please visit www.dynabreeze.com.au for more details

OPERATION CONDITIONS & SAFETY PRECAUTIONS

WARNING: When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury to persons or property.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging.

OPERATION CONDITIONS & SAFETY PRECAUTIONS

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Safety (charging)
Voltage: Before connecting the fan to a power supply for charging, ensure that the electrical voltage and circuit frequency correspond to those indicated on the charger rating label.
No extension cord: Do not use a mains adaptor/battery charger with an extension cord; connect it directly to a power socket. Charging through an extension cord may cause voltage drops, unstable power supply, or overheating, which could affect the charging performance or potentially damage the battery or adapter.
Connection/disconnection: To connect a battery charger, plug in directly to the USB-C socket. To disconnect, grip the power plug firmly and remove it from the outlet, do not pull on the cord. Do not use or charge the product if you notice anything wrong with the battery.
Charging: When charging the appliance, place the fan:
- On a flat surface to avoid overturning
- Close to a power point so no one trips over the cord.
- Away from heated surfaces, such as a stove or heater surface.

Protect from moisture and shocks: To protect against electric shock, do not immerse the battery charger or its cord or plug in water. Ensure your hands are dry before use. Do not expose the battery to liquid or subject it to strong mechanical shocks.
Storage: Please remember to turn off the fan and fully recharge the fan before long-term storage. Prolonged storage of an empty battery may damage the battery.

OPERATION CONDITIONS & SAFETY PRECAUTIONS

WARNING! DO NOT use the fan in the following areas:
- Near open flame, hot burner, oven or other high heat source.
- On a soft surface or where it may tip over during use.
- In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.



Do not stare directly at the light source when operating.

CAUTION! Personal safety: Avoid contact with moving parts. Never insert any objects through the grilles when the fan is running, as this may cause electric shock and/or a fire hazard. Keep hair and loose clothing well away from the fan when it is in use. **Service:** Do not attempt to open the fan. In case of malfunction, have the fan checked and repaired by qualified service personnel only. Do not disassemble or modify the appliance. **Airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles. **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

IMPORTANT INFORMATION

1. This product uses lithium battery, no memory function, overcharge or over discharge will affect the service life of the product, please charge in time and disconnect the power after full charge.
2. When the fan is working, the blades rotate at a high speed. Do not put your fingers into the fan to avoid danger.
3. This product is not a children's toy, children under 10 years old, please use under the care of a guardian.
4. Please use a compliant USB power adaptor with an output of 5V DC, 2A.